



Add buzzer enable(disable) option in the
speech setting

Outline

- **Purpose**

The user can enable or disable buzzer in the speech setting.

- **Equipment**

TM5

- **Function operation**

Outline

- **Purpose**

The user can enable or disable buzzer in the speech setting.

- **Equipment**

TM5

- **Function operation**


Function operation(1/2)

➤ Go to Setting → Speech

The screenshot displays the 'Robot Setting' interface. On the left is a dark sidebar with navigation options: Logout, Connect, View, Run Setting, Project, Setting (highlighted with a red box and a yellow circle containing the number 1), System, Shutdown, and Leave. The main area is titled 'Robot Setting' and contains a grid of icons for various functions: Wizard, Vision Setting, TCP Setting, I/O Setup, Safety, Controller, Speech (highlighted with a red box and a yellow circle containing the number 2), Gripper Button, Component, Safety Space, Command, Modbus, Posture Setting, RMS, and Global Variable. The top right of the interface shows an information icon, '50 %', and a menu icon.

Function operation(2/2)

- Check/uncheck the "Enable Buzzer" box to enable/disable it.

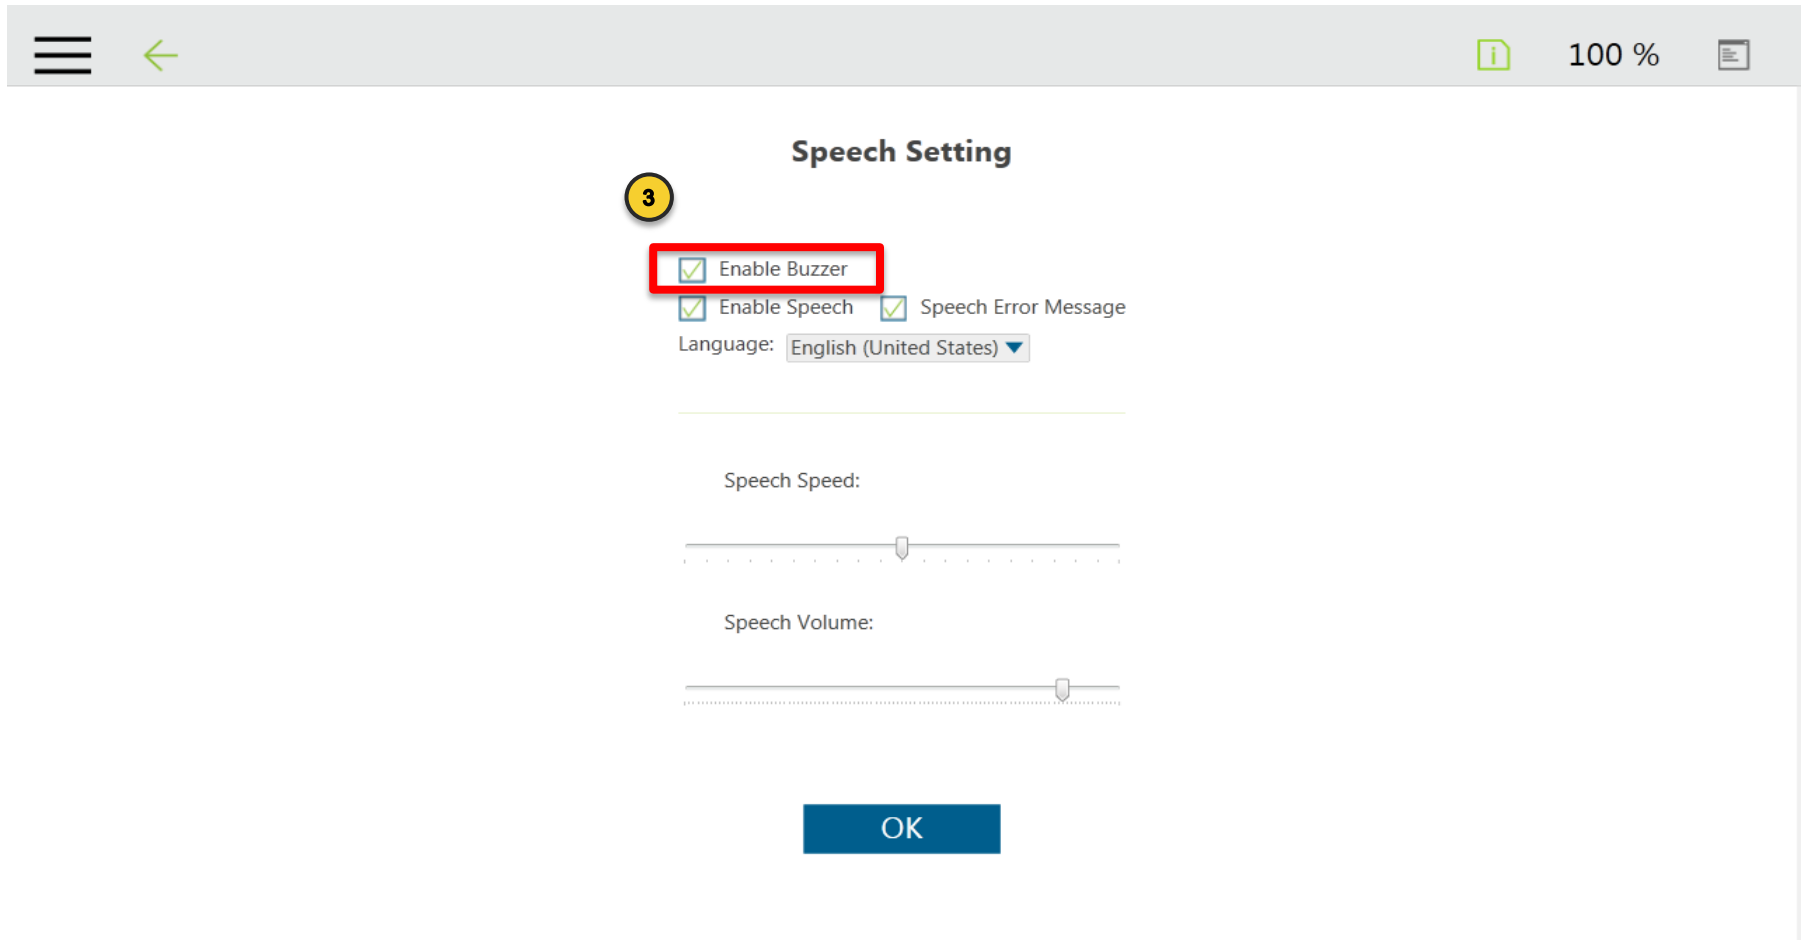

END